QUICK INSTALLATION GUIDE

ECOSOL BOX TO LIBRA UL-R, ARES AND DEIMOS BT







Product to be installed by a qualified installer Technical Support: 877-995-8155


5 SIMPLE RULES TO FOLLOW WHEN INSTALLING AN ECOSOL

- 1. Keep the system as simple as possible. The simpler the system, the least energy it consumes, hence, the better performance.
- **2.DO NOT PROGRAM REMOTES OR OPENING COMMAND INPUTS TO CONTROLLER BOARD.** All remotes and open command inputs must be wired to the ECOSOL board.
- 3.Free exit devices and magnetic loop detectors draw current at all times so it is suggested not to implement them. If a free exit device is a must, low power consumption detectors such as the Diablo Controls model DSP-6LP and DSP-7LP are strongly recommended over photocell sensors.
- 4.As a general rule, the solar panel should always face south and at an angle equal to the locations latitude +/- 10°, in a shade free area.
- 5. When in doubt, call tech support. **877-995-8155** or 561-995-8155

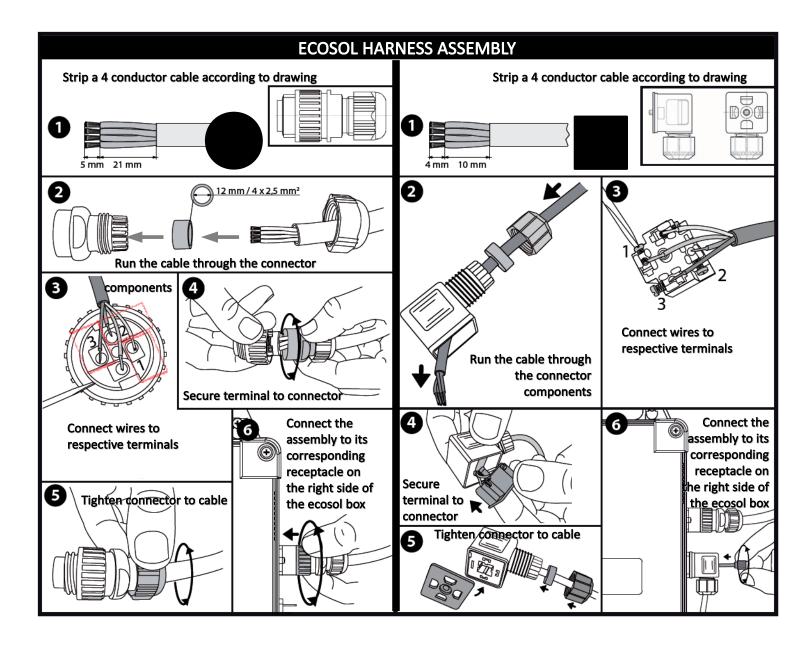

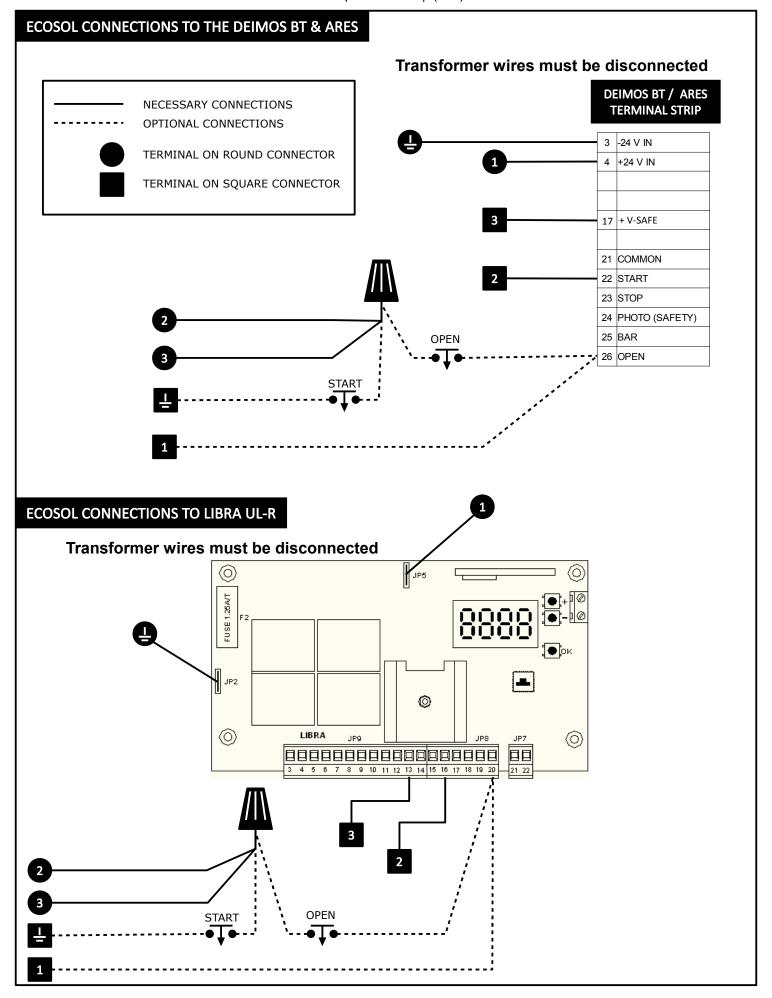

ECOSOL CONNECTIONS TO LIBRA UL-R 2 x 0,75 mm² 2 Controller @9 mm / 2 x 0,75 mm **BOX**

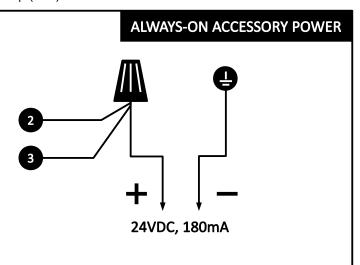

DIPSWITCH PROGRAMMING

DIPSWITCH 1

Turn on when ECOSOL Double (external battery pack) is connected to Ecosol board.

DIPSWITCH 2

Turn on for transmitter activated transmitter learning.


DIPSWITCH 3 & 4

linitial command delay setting

All off: 1.3 seconds 3 On: 1.5 seconds 4 On: 1.7 seconds 3 & 4 On: 2.1 seconds

RADIO TRANSMITTER PROGRAMMING

1. Press RADIO LEARN BUTTON every second.

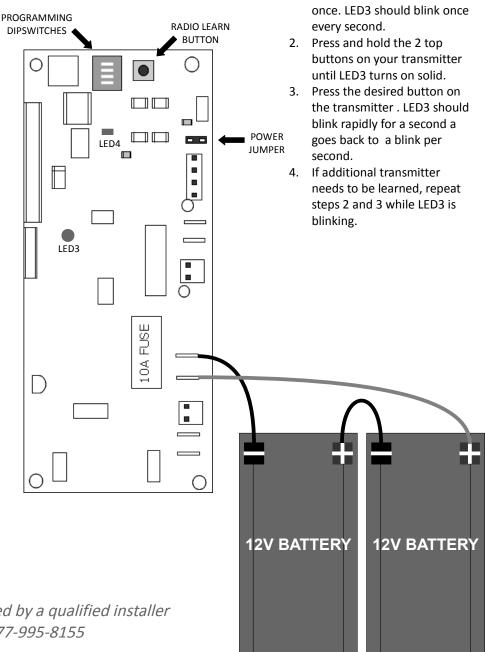

Product to be installed by a qualified installer Technical Support: 877-995-8155