

## PROGRAMMING THE T-BOX TO THE RECEIVER

**STEP 1** Press and HOLD the **ON** button until the red LED lights up.

**STEP 2** Press **1 1 1 1 ON**


(Default code for channel 1)

**STEP 3** On CLONIX or ECOSOL receivers, press the RADIO LEARN button.

On BFT Controllers with built-in receivers press:

 OK  OK  -  -  OK  OK

**STEP 4** Press the **ON** button at the T-Box and wait 5 seconds.

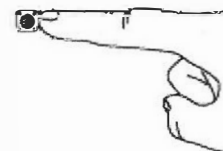

## CHANGING THE DEFAULT CODE

**STEP 1** Press and HOLD the **ON** button until the red LED lights up.

Press **1 1 1 1 OK**

(Default code for channel 1)

**STEP 2** Press **X X X X OK**

(New code for channel 1)

**STEP 3** Press **X X X X OK**

(New code for channel 1)



## ADDING CODES TO A CHANNEL

**STEP 1** Press and HOLD the **ON** button until the red LED lights up.

Press **1 2 3 4 OK**

(Default programming passcode)

**STEP 2** Press **X X X X OK**

(Existing code for channel 1)

**STEP 3** Press **N N N N OK**

(New code for channel 1)

**STEP 4** Press **N N N N OK**

(New code for channel 1)

